

ASSEMBLY INSTRUCTIONS FOR LTS BUCKET CASTORS

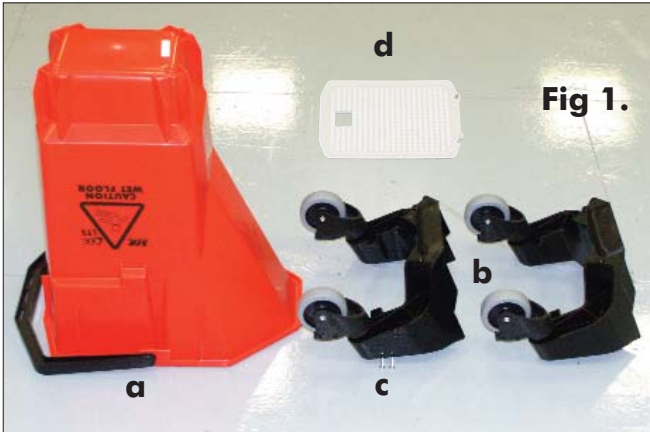


Fig 1. COMPONENTS CHECK.

- a. 1 x LTS Bucket Body
- b. 2 x Double Brackets c/w Castors
- c. 2 x Philips Head Screws (taped to Castor Bracket)
- d. Grid to fit into bottom of Bucket

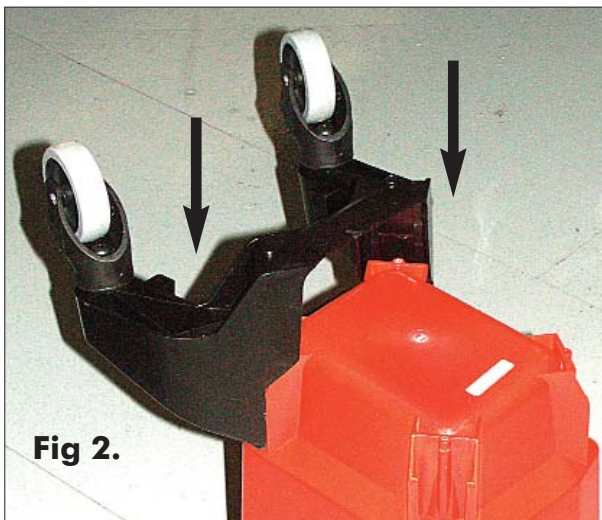


Fig 2.

With bucket body upside down as shown, slide one bracket evenly onto bucket as above.

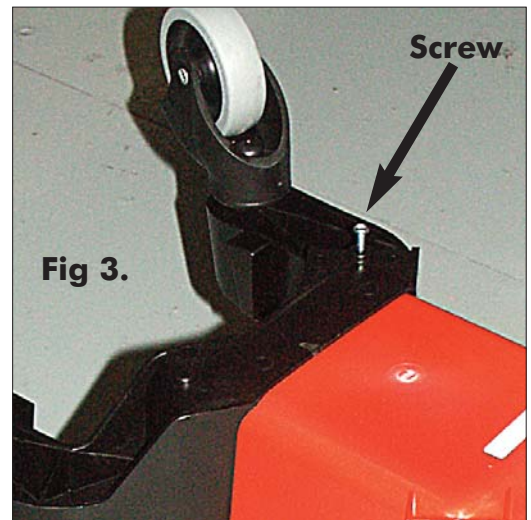


Fig 3.

Push down evenly until firmly seated on bucket and insert and tighten one screw as shown above.



Fig 4.

Repeat for other bracket.
Turn your bucket over, insert the white grid supplied into base of bucket, and your bucket is ready to use

